

Заправка картриджей Canon

Артикул	Принтер, МФУ	Розница
703	Laser Shot LBP 2900 / 3000	700
052 (2199C002)	i-SENSYS LBP212 / LBP214 / LBP215 / MF421 / MF426 / MF428	900
057 (3009c002)	LBP223dw / LBP226dw / LBP228x / MF443dw / MF445dw / MF446x / MF449x	900
719	LBP 6300DN / LBP 6650DN / MF 5940DN / MF 5980DW	900
719H	LBP 6300DN / LBP 6650DN / MF 5940DN / MF 5980DW	1100
725	i-SENSYS LBP-6000 / LBP-6000B	700
728	i-SENSYS MF4410 / MF4430 / MF4450 / MF4550D / MF4570DN / MF4580DN	700
737	i-SENSYS MF211 / 212 / 216 / 217 / 226 / 229	700
EP-22	Laser Shot LBP-800 / 810 / 1120	800
EP-26 / EP-27	Laser Shot LBP 3200 / Laser Base MF3110 / MF5630 / 5650 / 5730 / 5750 / 5770	800
FX-10	FAX L100 / L120 / i-SENSYS MF4120 / MF4140 / MF4150	700
E16/30	FC-108 / 128 / 200 / 208 / 220 / 228 / 336 / PC-860 / 880 / 890	800
C-EXV14	iR-2016 / iR-2018 / iR-2020 / iR-2022 / iR-2025 / iR-2030 / iR-2318L	1200
C-EXV33 (2785B002)	iR-2520 / iR-2525 / iR-2530	1500
C-EXV40	Canon iR1133 / iR1133A / iR1133iF	1550
C-EXV6	NP-7160 / NP-7161 / NP-7162 / NP-7163 / NP-7164 / NP-7210 / NP-7214	700
701 B	LBP-5200	2000
701 C,M,Y	LBP-5200	2000
707 B	LBP 5000	800
707 C,M,Y	LBP 5000	800
710 B,C,M,Y	Laser Shot LBP 3460	800
711 B,C,M,Y	LBP-5300 / LBP-5360 / MF-8450 / MF-9130 / MF-9170 / MF-9220 / MF-9280	2500
716 B	i-SENSYS LBP-5050 / LBP-5970 / LBP-5975 / MF-8030 / MF-8050C	600
716 C,M,Y	i-SENSYS LBP-5050 / LBP-5970 / LBP-5975 / MF-8030 / MF-8050C	600
718 B	i-SENSYS LBP7200Cdn	1400
718 C,M,Y	i-SENSYS LBP7200Cdn	1400
723 B	LBP7750Cdn	2000
723 C,M,Y	LBP7750Cdn	2000
729 B	LBP7010C / LBP7018C	1000
729 C,M,Y	LBP7010C / LBP7018C	1000
731 B	LBP7100 / 7110	1000
731 C,M,Y	LBP7100 / 7110	1000
№045H CMY	LBP-611/611CN/613/613CDW/MF631/631CN/633/633CDW/635/635CX	1000
№045H CMY	LBP-611/611CN/613/613CDW/MF631/631CN/633/633CDW/635/635CX	1200